



American Party Place
4522 S Tacoma Way, Tacoma, WA 98409
253-473-3300
www.americanpartyplace.com

Beverage Fountains

Do not:

- Run the fountain dry
- Immerse base of fountain in liquid
- Use beverages with pulp, seeds, or fruit in the fountain
- Use any type abrasive for cleaning the fountain
- Take unit apart

To Operate:

1. Pour approx. 2 quarts of your beverage of choice into lower reservoir
2. Turn power switch to on

Note: If beverage does not circulate within 1 minute turn off for 10 seconds and repeat procedure.

Cleaning Instructions:

1. Empty remaining beverage after use.
2. Fill lower reservoir with 2 gallons of warm water
3. Let circulate for 5 minutes
4. Empty water and repeat

A \$5.00 cleaning charge will apply if fountain is not returned cleaned