



American Party Place
4522 S Tacoma Way, Tacoma, WA 98409
253-473-3300
www.americanpartyplace.com

Cotton Candy Machine

Do Not:

- Use with any power source besides a 15 amp, 120 volt, 60 cycle electrical service
- Use gum or starch based cotton candy sugar in machine
- Add sugar when motor is running/spinner head is rotating
- Put hand or objects in rotating spinner head
- Put water in floss head
- Scratch the machine band or stretch machine ribbon
- Take the machine apart!

To Operate:

1. Fill floss head 90% full with sugar
2. Manually turn head to balance out sugar
3. Turn main switch “ON”, followed by heat switch “ON”
4. Turn heat control knob clockwise to maximum setting
5. When unit starts making floss (usually within a few seconds) reduce the heat setting to ideal setting
6. Use floss cone to roll cone in web of floss
7. Lift cone and wrap floss until desired amount

Note: Operator should wear eye protection

Cleaning Instructions:

1. Run all sugar out of floss head
2. Turn heat to highest position for approx. 1 minute to “clean” the band
3. Turn control knob back down to minimum temperature setting
4. Turn heat switch “OFF”, followed by main control switch “OFF”
5. Unplug machine
6. After floss head has cooled, wipe all surfaces with a hot, damp, clean cloth