 


PLEASE POST FOR YOUR FACILITY'S STAFF TO READ

SET YOUR DANCE FLOOR SAFELY

READ THE OPERATING INSTRUCTIONS SHIPPED WITH YOUR DANCE FLOOR*

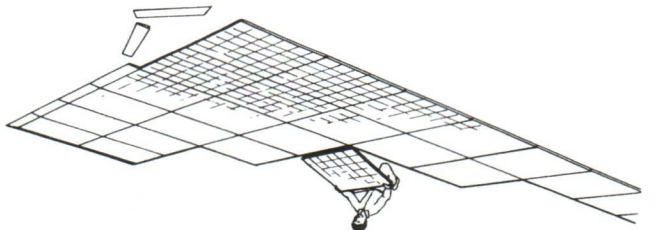


1. SET UP SUFFICIENT PANELS

Use enough panels so guests are not crowded. Set dance floor on a level surface.




3. TIGHTEN LOCKS SECURELY

There should be no gaps or holes between panels and/or trim.

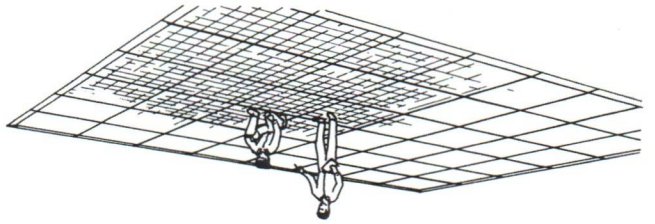

5. INSPECT FLOOR BEFORE GUESTS ARRIVE

Make sure all panels and trim are properly connected and the entire surface is clean.

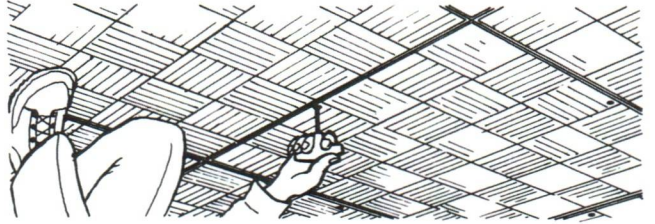


7. RE-TIGHTEN LOCKS AFTER EACH USE

When a dance floor is left down for future events, locks should be re-checked before use.


9. KEEP ROOM BRIGHTLY LIT.

READ THE OPERATING INSTRUCTIONS SHIPPED WITH YOUR DANCE FLOOR*

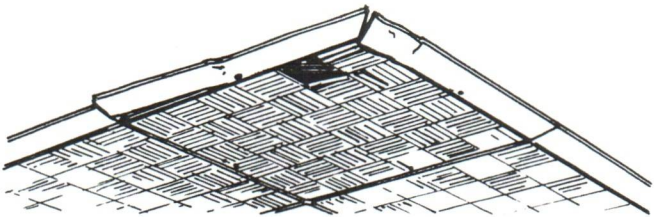


2. DO NOT USE DAMAGED FLOOR PANELS & TRIM


Remove from service any panels that are damaged or do not securely lock together.

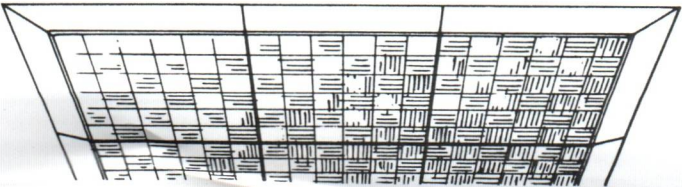

4. INSTALL TRIM ON ALL SIDES OF DANCE FLOOR

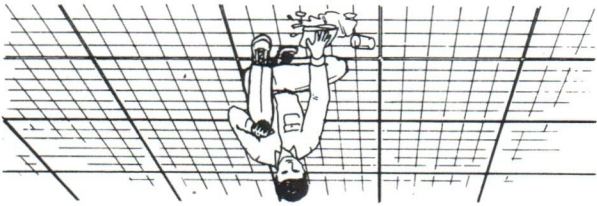

6. CLEAN UP SPILLED FOOD AND DRINKS IMMEDIATELY

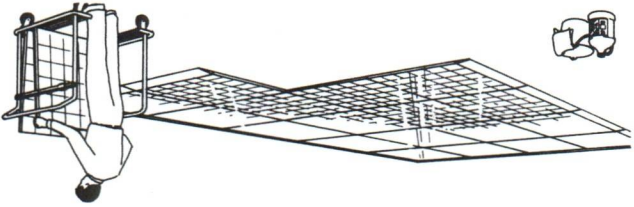

8. CLEAN FLOOR SURFACE BEFORE TAKING APART

Read maintenance instructions shipped with your dance floor.*

10. DO NOT MIX DANCE FLOORS OF DIFFERENT MANUFACTURERS.

*Operating and Maintenance Instructions on Sico dance floors are on the background of all panels.

For additional Dance Floor Safety Posters, call or write: Sico Incorporated,

7525 Cahill Road, MN 55439 Phone 800-328-6138

Part Number
120037
Date
03/28/23
Rev #
A