



American Party Place  
4522 S Tacoma Way, Tacoma, WA 98409  
253-473-3300  
[www.americanpartyplace.com](http://www.americanpartyplace.com)

## Hot Dog Roller

### To Operate:

1. Place hot dogs on the rollers
2. Turn heat to designated temperature (left knob controls 5 front rollers, right knob controls 5 rear rollers)
3. Determine level of heat required choosing from one of three settings: low, medium, high

### **Note:**

- Machine will accommodate 18 standard hot dogs
- Approx. cooking time for standard hot dogs is 15 minutes; holding cooked hot dogs at a warm temperature is acceptable

### Cleaning Instructions:

1. Unplug power cord from outlet
2. Remove any remaining hot dogs from rollers
3. Wipe rollers down
4. Remove drip pan and clean thoroughly; reinsert the pan

**\*A \$5.00 cleaning charge will apply if hot dog roller is not returned cleaned\***