



American Party Place  
4522 S Tacoma Way, Tacoma, WA 98409  
253-473-3300  
[www.americanpartyplace.com](http://www.americanpartyplace.com)

## Sno-Kone Machine

### Do Not:

- Submerge in water
- Allow any foreign or metallic objects into/around shaver area
- Use Sno-Konette on any electrical outlet other than a 120 volt, 15 amp, single phase, 60 cycle AC current
- Use Sno-Konette Export on any electrical outlet other than a 230 volt, 50 cycle
- Forget to return scoop, and drain pan with hose!

### To Operate:

1. Fill hopper to within inch of the top with ice cubes or block ice (no larger than 3“-4”)
2. Switch motor to “ON”
3. After approx. 1 minute, push the pusher handle down against the ice hopper, applying firm and even pressure
4. Relieve pressure two or three times in one cycle to allow ice to resettle

### **Note:**

- Too much pressure on pusher handle = coarse snow
- Too little pressure on pusher handle = mushy snow
- 1 standard bag of ice = approx. 15-20 snow cones

### Cleaning Instructions:

1. Take a damp clean towel to inside of machine and wipe down thoroughly